



# How to Run KIVA-3V

## Standard KIVA-3V File Structure

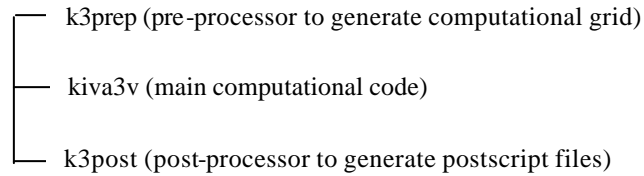

## Procedure

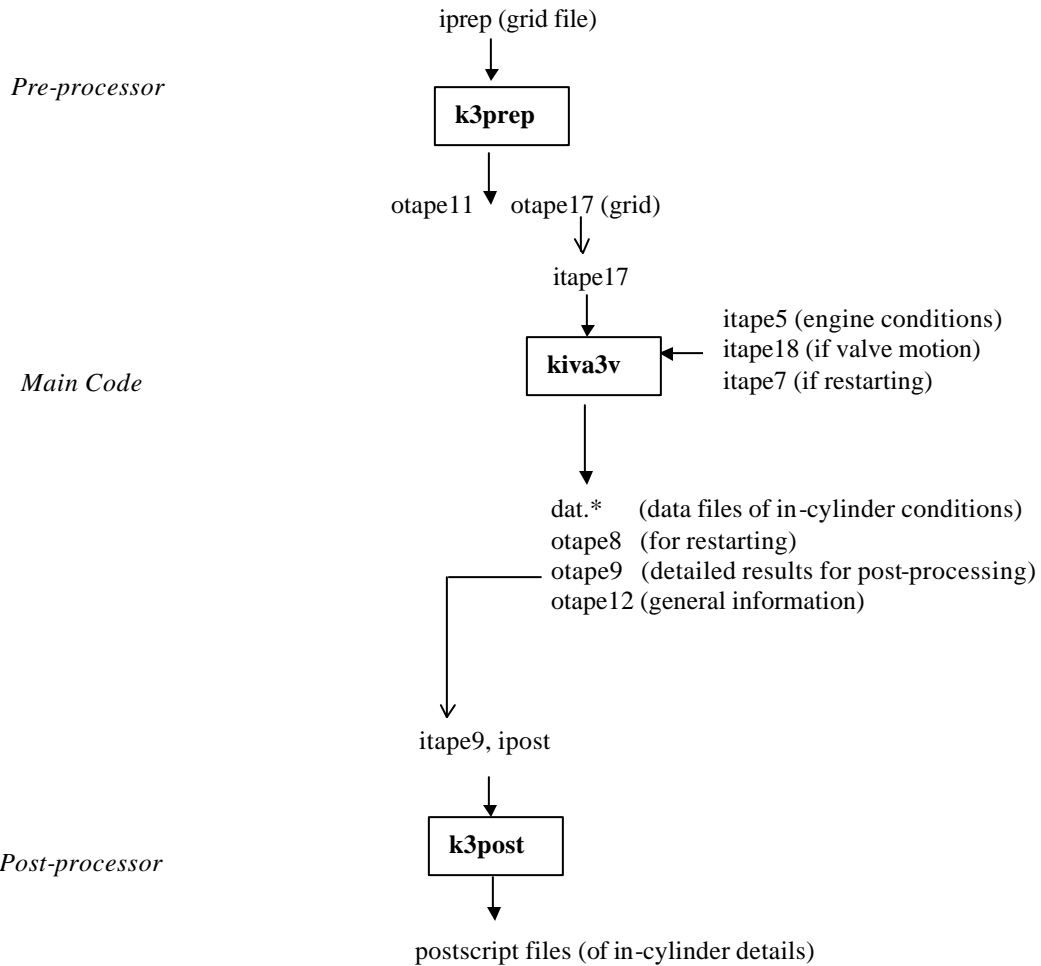

Note: **restart** feature—during the code execution, it allows to run up to a certain crank angle and then restart the calculation. To do this, just rename ‘otape8’ as ‘itape7’ and increase the value of the parameter ‘irest’ by one in ‘itape5’.